Qtex

MATRIX SWITCHER

# USER MANUAL







## QVP VW412H4

Seamless Matrix Switcher
4 Window Multiviewer
LCD and LED Video Wall Controller

## CONTENT


1. System description ..... 3
1.1. Introduction ..... 3
1.2. Features ..... 3
2. Panel Layout ..... 3
2.1 Front view ..... 3
2.2 Rear view ..... 4
3. Typical application cases ..... 4
4. Output resolution list ..... 5
5. PC Tool user guide ..... 5
5.1 Connect tab ..... 5
5.2 Matrix switch tab ..... 7
5.3 Signal config tab ..... 8
5.4 TV wall tab ..... 8
5.5 Multiview tab ..... 9
5.6 System tab ..... 9
6. How to achieve point to point display with LED panel ..... 10
7. Specification ..... 10
8. Package Contents ..... 10




## WARNING

- Do not expose this device to Rain, Moisture, and Dripping
- Only use accessories specified by the manufacture
- Unplug this device during Lightning Storms
- The manual is for reference only, maybe updated without further notice

# 1. System description

## 1.1 Introduction

The Video Processor is a high-performance HDMI 2.0 video signal processor.

It can be used as a video wall splicing processor or as a seamless switching matrix switcher with4 inputs and 12 outputs.


All standalone output display or video wall display can work in multiview mode with a maximum of 4 windows.

## 1.2 Features

1. Support seamless switching between different input source
2. Comprehensive splicing display function, free multiview up to 4 window
3. Support two synchronization mode for all output ports: General synchronization mode and Sync delay mode
4. Supports 180° rotation function
5. 4 Inputs and 12 Outputs  HDMI 2.0, up to 3840x2160/4096x2160@60Hz resolution
6. Support Auto and User Define output resolution, can be flexibly applied to the display of LED wall
7. Support one break away audio extractor and switcher
8. Provide multiple control ports: front panel buttons, remote control, RS232, network and WebGui control


# 2. Panel Layout

## 2.1 Front view

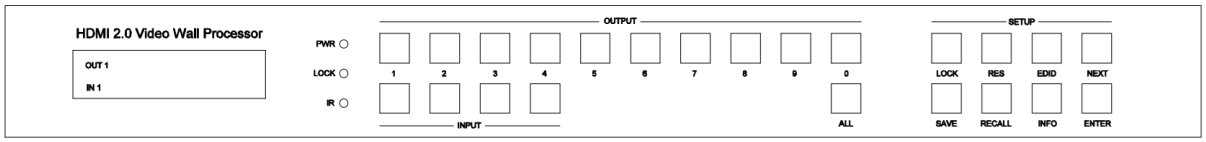


1. LCM display screen: displays the routing status of each channel in the matrix. Used together with front buttons, it can set and view some parameters
2. OUT SELECT  1, 2...9, 0, ALL
3. IN SELECT  1, 2, 3, 4
   Press OUTPUT m +INPUT n +ENTER,  switch input n to output m
4. ALL button: Press ALL + INPUT n +ENTER, switch input n to all output ports
5. Lock button : Hold this button more than 3 seconds, all the fronts buttons will be locked and will not work. Hold it more than 3 seconds again, unlock
6. Press buttons RES + OUTPUT m + NEXT + ENTER with guide of front LCM screen display, to change output resolution of OUTPUT m
7. Press buttons EDID + INPUT n + NEXT + ENTER with guide of front LCM screen display, to change the EDID mode of INPUT n
8. SAVE button : Press SAVE+ OUTPUT m +ENTER, save current routing and screen layout to scene m
9. RECALL button: Press RECALL+ OUTPUT m +ENTER, load scene m for current displaying
10. INFO button: Continuously press INFO button, front LCD panel will loop display IR ON/OFF,RS232 Baud Rate and IP parameters etc,.
11. IR: IR receiver, can be disabled by RS232 command

## 2.2 Rear view

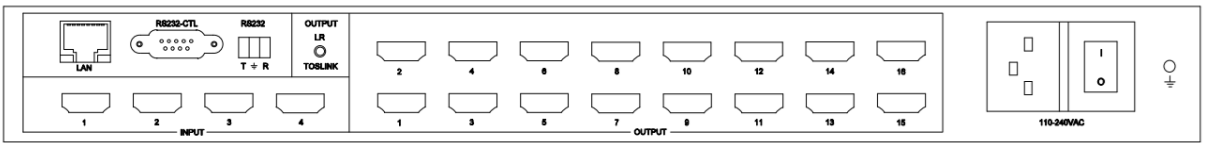


1. LAN control  TCP/IP or Web Control
   IP address: 192.168.0.247,  Submask: 255.255.255.0,  Gateway: 192.168.0.1,  Baud Rate: 9600,  NetPort: 23
   Web login account : admin  password : admin
2. RS232-CTL
   Baud Rate: 9600
3. RS232-Phoenix:
   Baud Rate: 9600
   T: Main Unit -> PC,  G: Ground,  R: Main Unit <- PC
4. Inputs and outputs
   4 HDMI inputs,12 HDMI outputs,1 LR/Toslink(Spdif-Optical) audio output
   Note: The audio output can be switched among IN1,IN2,IN3,IN4 via RS232 command or PC Tool

## 3. Typical application cases

1. General Seamless Matrix Switcher, 4 inputs, 12 outputs. Users can also set multiview outputs as needed



2. One Non-Multiview View video Wall processor: 3x3, 3x4,etc.
3. Two or more Non-Multiview View Video Wall processor and standalone outputs, total screens shall not exceeding 12



4. One Multiview View Video Wall processor, and standalone outputs

# 4. Output resolution list

| Hex Index | Output Resolution | Hex Index | Output Resolution |
|---|---|---|---|
| 00 | 4096x2160p 60Hz | 0C | 1920x1080p30 Hz |
| 01 | 4096x2160p 50Hz | 0D | 1680x1050p60 Hz |
| 02 | 3840x2160p 60Hz | 0E | 1600x1200p60 Hz |
| 03 | 3840x2160p 50Hz | 0F | 1360x768p60 Hz |
| 04 | 3840x2160p 30Hz | 10 | 1280x1024p60 Hz |
| 05 | 3840x2160p 25Hz | 11 | 1280x768p60 Hz |
| 06 | 3440x1440p 60Hz | 12 | 1280x720p60 Hz |
| 07 | 2560x1600p 60Hz | 13 | 1280x720p50 Hz |
| 08 | 2560x1440p 60Hz | 14 | 1024x768p60 Hz |
| 09 | 1920x1200p 60Hz | 15 | USER |
| 0A | 1920x1080p 60Hz | 16 | AUTO |
| 0B | 1920x1080p 50Hz | | |

# 5. PC Tool user guide


This PC tool is an installation free control software. It is divided into seven tabs according to different functions: Connect, Matrix, Signal, TV wall, System, and Multiview

The initial login password is: 111111


## 5.1 Connect tab

Please note:


1. Use serial cable (straight line) or Ethernet cable
2. When using a serial port connection, the network port connection must be disconnected, and vice versa
3. When connecting through the network port, you must first search for and select the device before connecting

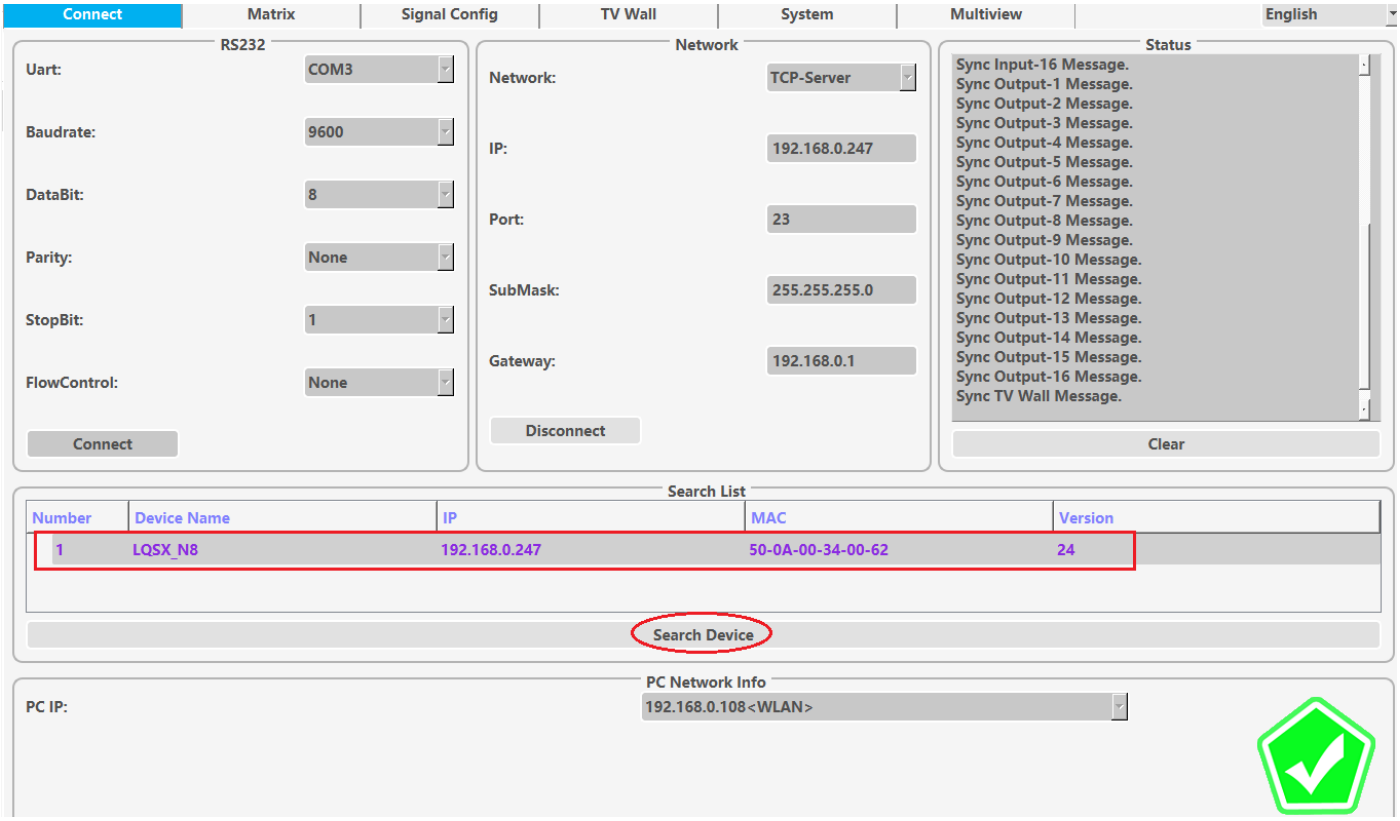
Connect
Matrix
Signal Config
TV Wall
System
Multiview
English
RS232
Uart:
COM3
Baudrate:
9600
DataBit:
8
Parity:
None
StopBit:
1
FlowControl:
None
Connect
Network
Network:
TCP-Server
IP:
192.168.0.247
Port:
23
SubMask:
255.255.255.0
Gateway:
192.168.0.1
Disconnect
Status
Sync Input-16 Message.
Sync Output-1 Message.
Sync Output-2 Message.
Sync Output-3 Message.
Sync Output-4 Message.
Sync Output-5 Message.
Sync Output-6 Message.
Sync Output-7 Message.
Sync Output-8 Message.
Sync Output-9 Message.
Sync Output-10 Message.
Sync Output-11 Message.
Sync Output-12 Message.
Sync Output-13 Message.
Sync Output-14 Message.
Sync Output-15 Message.
Sync Output-16 Message.
Sync TV Wall Message.
Clear
Search List
Number
Device Name
IP
MAC
Version
1
LQSX_N8
192.168.0.247
50-0A-00-34-00-62
24
Search Device
PC Network Info
PC IP:
192.168.0.108<WLAN>

## 5.2 Matrix switch tab

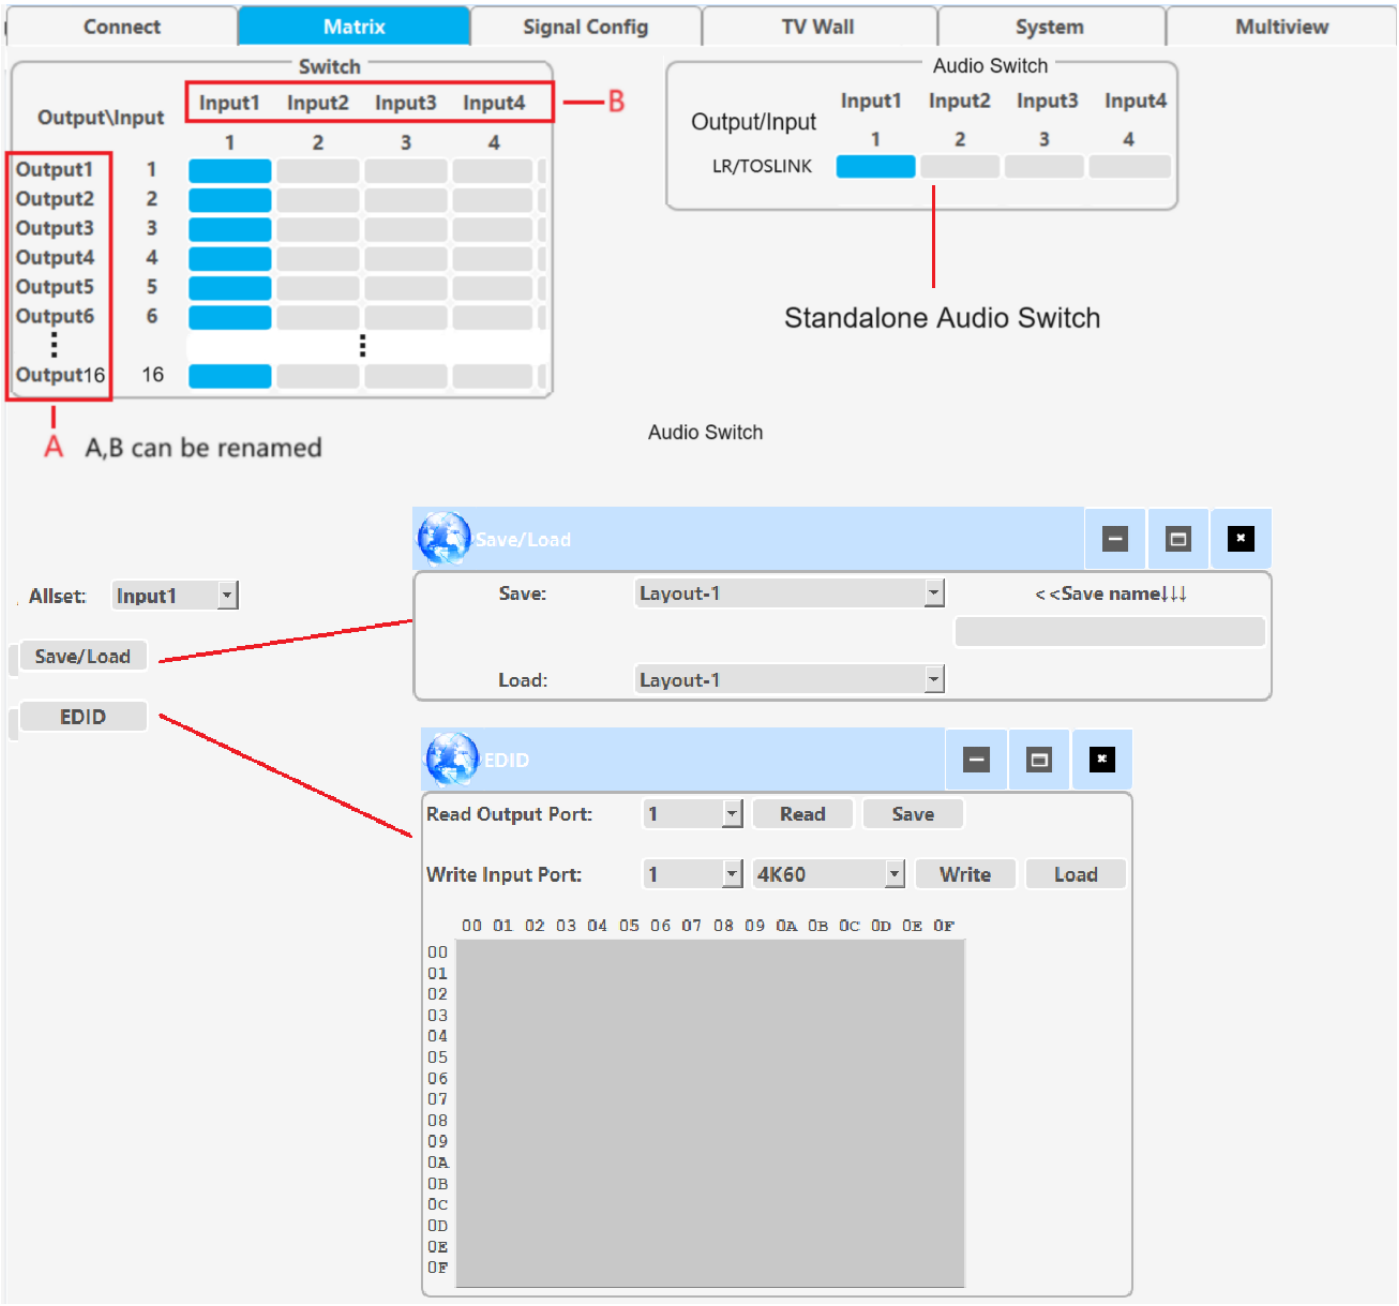


## 5.3 Signal config tab

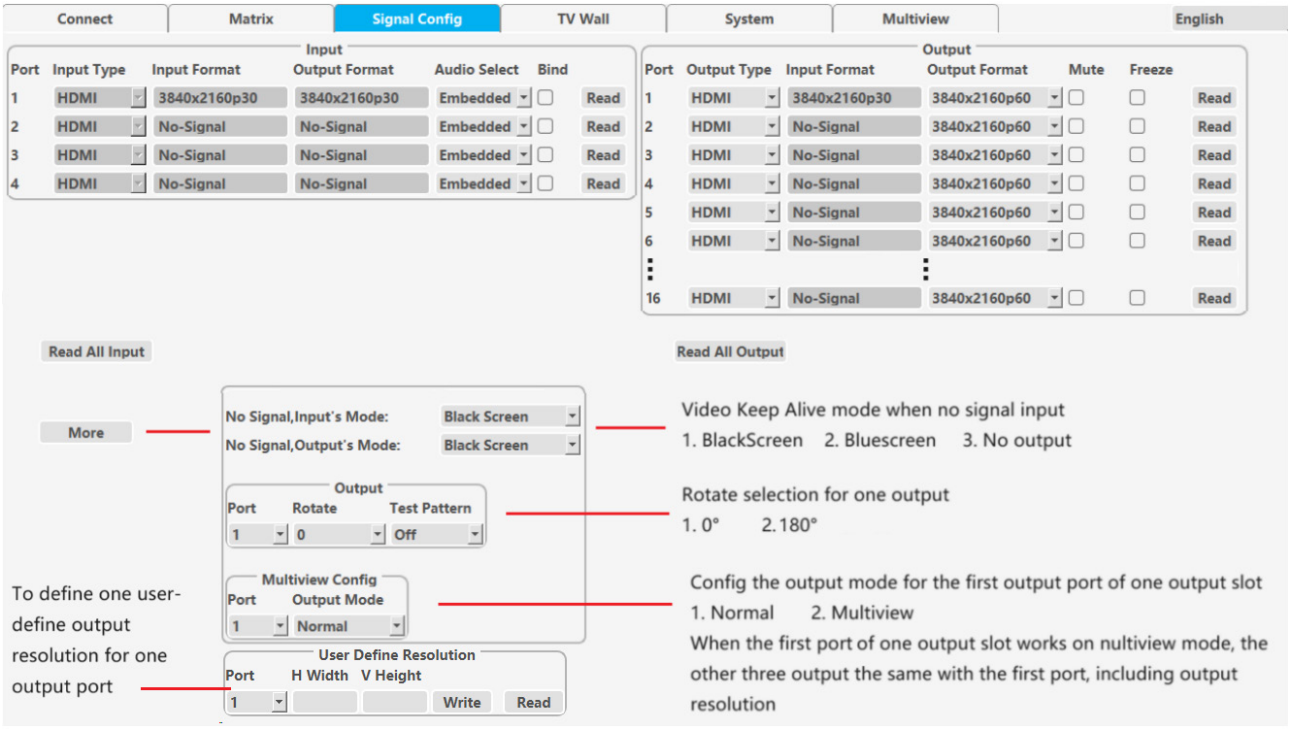



## 5.4 TV wall tab

This tab set the splicing wall parameters: layout, border, input/output settings, etc

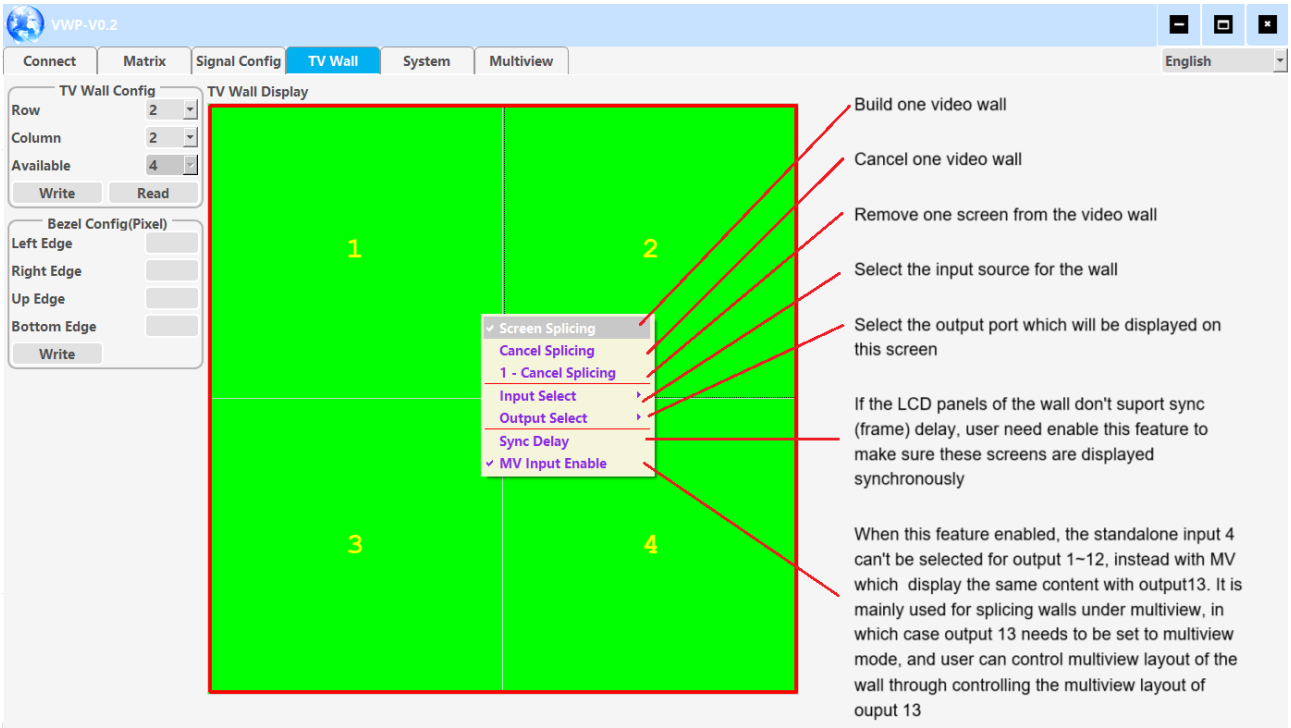


## 5.5 Multiview tab

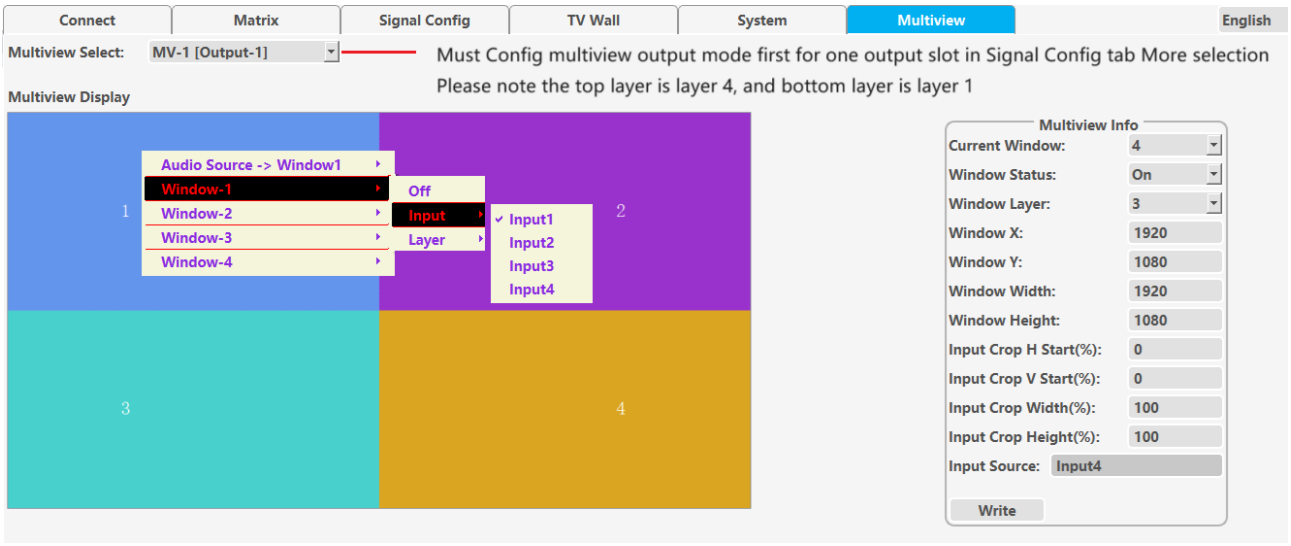


## 5.6 System tab

This tab sets network parameters, resets, reads software versions, etc

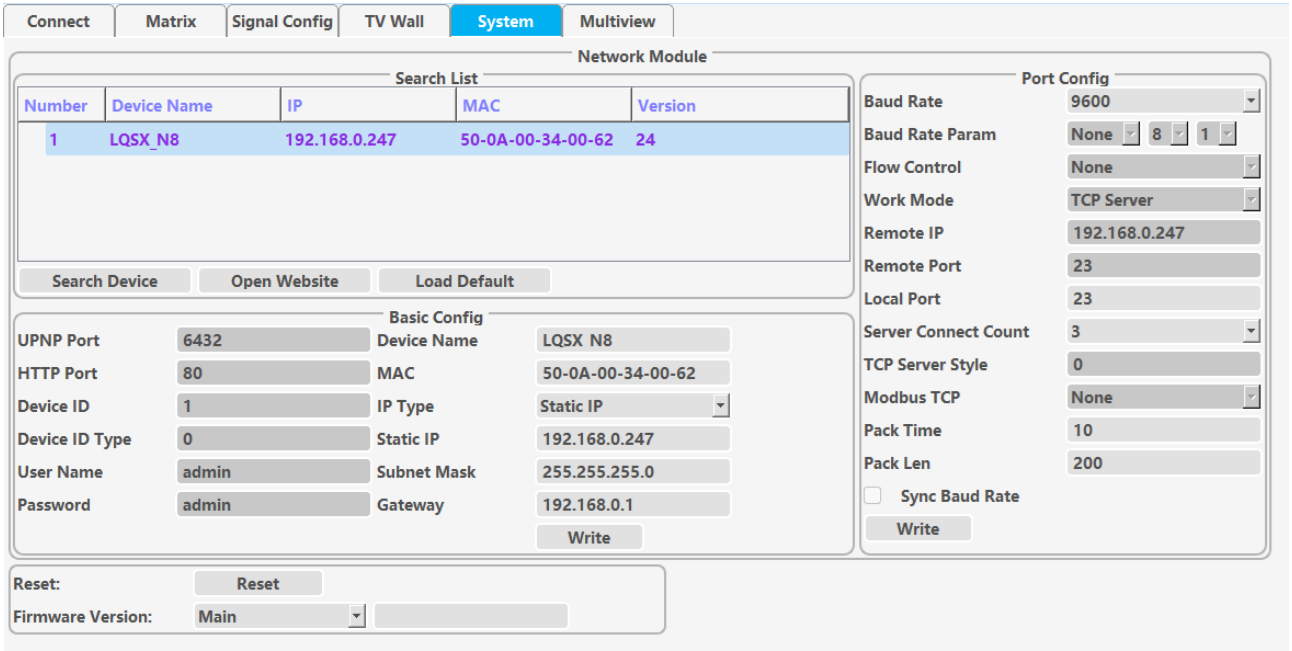

# 6. How to achieve point to point display with LED panel

**Step 1,** connect input cable between source and one input port of the matrix switcher.

**Step 2,** connect output cable between LED panel and one output port of the matrix switcher.

**Step 3,** read the EDID of LED panel with PC Tool and download this EDID to the input port of the matrix switcher.

**Step 4,** set the output resolution of this output port as AUTO, or USER. When set USER, need configure the user define resolution first, and make the user defined resolution to match the physical resolution of the LED panel perfectly.

# 7. Specification

| | |
|---|---|
| Band Width | 594MHz (18Gbps), HDMI 2.0, HDCP2,2 |
| Audio Format | LPCM 2.0 |
| Input ports | 4 HDMI |
| Output ports | 12 HDMI, 1 Mini Toslink port |
| Power Supply | 110-240VAC |
| Power Consumption | 75W Max |
| Operating Temperature | 0 to +40°C (+32 to +104 °F) |
| Operating Humidity | 10 to 70 % RH (non-condensing) |
| ESD | Air: ± 8KV, Contact: ± 4KV, |
| Dimensions | L430 x W220 x H44 mm |
| Mass | 5kg |

# 8. Package Contents

| Item | Quantity |
|---|---|
| Main Unit | 1 |
| AC Power Cord | 1 |
| USB to RS232 cable | 1 |
| 1 meter RJ45 cable | 1 |



QTEX.RU